



Thrill Extanda

PRODUCT MANUAL

7 massage modes

3 thrusting speeds

Realistic head

Strong suction cup

Waterproof

**Made from silicone
and ABS plastic**






Charging


- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 2 hours for 1 hour of play.
- Do not use the device while charging.



USB
charging port

How To Use

- Press the  button to turn on/off.
- Press the  button quickly to cycle through 7 massage modes.
- Hold the  button to turn the massage mode off.
- Press the  button quickly to cycle through 3 thrusting speeds.
- Hold the  button to turn the thrusting mode off.

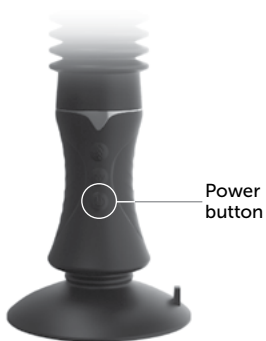

Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with water-based lube only, no silicone lubricants.
- Please avoid contact with silicone or silicone-containing materials as it may damage the product.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasy
THE NEW INTIMACY

www.edenfantasy.com

Customer Service
10 AM - 7 PM EST
Phone: +1 (770) 604 - 1352