ed@nfantasys



9 massage modes

Stretchy loop for clitoral and nipple stimulation

Waterproof

Made from silicone and ABS plastic

Charging

- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on)
- The intermittent glow indicates charging in progress.
- A full charge takes up to 1 hour for 48 minutes of play.
- Do not use the device while charging.



Magnetic USB charging port

PRODUCT MANUAL

How To Use

- Hold the **b** button to turn the toy on/off.
- Press the W button to cycle through 9 massage modes.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with water-based lube only, no silicone lubricants.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasys

www.edenfantasys.com

Customer Service 10 AM - 7 PM EST Phone: +1 (770) 604 - 1352