



# Thrill wand

PRODUCT MANUAL

---

**8 vibration modes**

---

**Flexible neck**

---

**Waterproof**

---

**Made from silicone  
and ABS plastic**

## Charging

---

- For maximum pleasure, charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 1.5 hours for 1 hour of play.
- Do not use the device while charging.



USB  
charging port

## How To Use

---

- Hold the **O** button to turn on/off.
- Press it quickly to cycle through 8 vibration modes.
- Press the **+** button to increase vibration intensity.
- Press the **-** button to reduce vibration intensity.



## Cleaning and Care

---

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.



## Warning

---

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

**edenfantasy**  
THE NEW INTIMACY

[www.edenfantasy.com](http://www.edenfantasy.com)

Customer Service 24/7  
Phone: +1 (770) 604 - 1352