edénfantasys



Thundercock silicone

PRODUCT MANUAL

10 vibration modes

Super stretchy

Waterproof

Made from silicone and ABS plastic

Power

- The item is powered by 1 AAA battery.
- Unscrew the base of the bullet to insert the battery.
- Follow the polarity instructions inside the battery case.



¹ AAA battery

How To Use

- Hold the button to turn on/off.
- Press it quickly to cycle through 10 vibration modes.
- Do not remove the bullet.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.
- The item can be sterilized with a 5% bleach solution or alcohol.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edénfantasys

www.edenfantasys.com

Customer Service 24/7 Phone: +1 (770) 604 - 1352