



Trifecta

PRODUCT MANUAL

Triple stimulation

7 vibration modes

Independent motors

Rhinestone accents

Waterproof

**Made from silicone
and ABS plastic**



Charging

- For maximum pleasure charge before every use.
- Connect the included USB magnetic charging cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on) or power bank.
- The slow, intermittent glow indicates charging in progress.
- A full charge takes up to 120 minutes for 80 minutes of play.



Magnetic
charging port

How To Use

- Hold the button in the form of a crystal to turn the toy on/off.
- Press the top  button to cycle through 7 vibration modes for the main shaft.
- Hold it to turn the main shaft off.
- Press the bottom  button to cycle through 7 vibration modes for clit and anal attachments.
- Hold it to turn clit and anal attachments off.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air dry completely.
- Use with the water-based lube only, no silicone lubricants.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasy
THE NEW INTIMACY

www.edenfantasy.com

Customer Service 24/7
Phone: +1 (770) 604 - 1352