ed@nfantasys



Triple explosion

PRODUCT MANUAL

10 vibration modes

3 powerful motors

Made from silicone

Waterproof

Charging

- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 3 hours for 1 hour of play.



How To Use

Without remote control

- Hold the 🖰 button to turn on/off.
- Press it quickly to cycle through
 10 vibration modes

With the remote control

- Insert 1 CR2032 battery to power the remote.
- Hold the 🖒 button to turn on/off.
- Press the W button quickly to cycle through 10 powerful modes.
- Press the # button to increase/reduce intensity.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.
- The item can be sterilized with a 5% bleach solution or alcohol.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.



www.edenfantasys.com

Customer Service 24/7 Phone: +1 (770) 604 - 1352