



9 vibration patterns

2 powerful motors

Remote-controlled

C-shape design

Waterproof

**Made from silicone
and ABS plastic**

Tropicana

PRODUCT MANUAL

Charging


- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 2 hours for 40 minutes of play.
- Do not use the device while charging.
- The remote is powered by CR2032 battery (included).







USB
charging port

How To Use

Without remote control

- Hold the  button to turn on/off.
- Press it quickly to cycle through 9 vibration modes.

With the remote control

- Hold the  button on the toy for standby mode.
- Hold the  button on the remote to turn the toy on.
- Press the  button quickly to cycle through 9 vibration modes.
- Hold the  button to pause the vibration.
- You can unpause the toy with the remote control within 20 minutes, otherwise, it will turn off.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasy
THE NEW INTIMACY

www.edenfantasy.com

Customer Service 24/7
Phone: +1 (770) 604 - 1352