ed@nfantasys



Thrust Share

2 independent motors

3 thrusting intensities

10 massage modes

Remote control

Waterproof

Made from silicone and ABS plastic

Charging

- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The glow indicates charging in progress.
- A full charge takes up to 75 minutes for 55 minutes of play.
- Do not use the device while charging.
- The remote control is powered by 1 CR2032 battery (included).



Magnetic USB charging port

PRODUCT MANUAL

How To Use

Without remote control

- Hold the 11, button to turn the receiver's end on/off.
- Press it quickly to cycle through 3 thrusting intensities.
- Hold the W button to turn the massage mode on/off.
- Press it quickly to cycle through 10 massage modes.

With remote control

- Hold the 1, button on the toy to enter the standby mode.
- Press the 11 button on the remote to cycle through 3 thrusting intensities.
- Hold it to pause the thrusting motion.
- Hold the w button on the toy to enter the standby mode.
- Press the W button on the remote to cycle through 10 massage modes.
- Hold it to pause the massage mode.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Do not get water inside the remote control as it is not waterproof.
- Use with water-based lube only, no silicone lubricants.

Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.





www.edenfantasys.com

Customer Service 10 AM - 7 PM EST Phone: +1 (770) 604 - 1352