edénfantasys



Nubbed tunnel

Waterproof


12 vibration modes

Open-end design

Made from skin-like TPE material and ABS plastic

Charging

- For maximum pleasure, charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 2 hours for 1.5 hours of play.
- Do not use the device while charging.

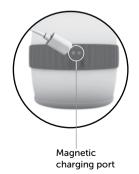

Turbo cup

PRODUCT MANUAL

How To Use

- Open the two covers.
- Hold the + button to turn on.
- Press the + or button quickly to cycle through 12 vibration modes.
- Hold the button to turn off.



Cleaning and Care

- Do not take the sleeve out of the plastic case as it's not removable.
- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Dust lightly with the corn starch for better use.
- Store away from heat and sunlight.
- Use with the water-based lube only, no silicone lubricants.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.



www.edenfantasys.com

Customer Service 24/7 Phone: +1 (770) 604 - 1352