# ed@nfantasys



**Twist** 

# 3 independent motors

12 vibration modes

Made from silicone and ABS plastic

Waterproof

# Charging

- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 2 hours for 1.5 hours of play



#### **How To Use**

- Hold the O button to turn the motor at the base on/off.
- Press the O button quickly to cycle through 12 vibration modes.
- Hold the **U** button to turn the motors in the arms on/off.
- Press the **V** button quickly to cycle through 12 powerful modes.



### **Cleaning and Care**

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air dry completely.
- Use with the water-based lube only, no silicone lubricants.
- The item can be sterilized with a 5% bleach solution or alcohol.



# Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.



www.eden fant as ys.com

Customer Service 24/7 Phone: +1 (770) 604 - 1352