## edenfantasys



USB power egg

PRODUCT MANUAL

## 20 vibration modes

Powered by USB

Made from velvety plastic

#### Charging

 Insert the USB end into the wall adaptor or computer/smartphone USB port (the device must be turned on) to power the toy.



#### **How To Use**

- Press the **b** button to turn on/off.
- Press the button to cycle through 20 vibration modes.



#### **Cleaning and Care**

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with water-based, silicone, or oil-based lubricants.



### Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

# edenfantasys

www.edenfantasys.com

Customer Service 10 AM - 7 PM EST Phone: +1 (770) 604 - 1352