



**Uno**

**PRODUCT MANUAL**

**10 vibration modes**

**Remote-controlled**

**Waterproof IPX6**

**Made from silicone  
and ABS plastic**

## **Charging**


- For maximum pleasure, charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow, intermittent glow indicates charging in progress.
- A full charge takes up to 2 hours for 2 hours of play.
- Do not use the device while charging.
- The remote is powered by CR2032 battery (included).







USB charging port

## How To Use

---

- Hold the  button to turn on/off.
- Press it quickly to cycle through 10 vibration modes.

### Without remote control

- Hold the  button on the toy for standby mode.
- Hold the  button on the remote to turn the toy on.
- Press the  button quickly to cycle through 10 vibration modes.
- Hold the  button to pause the vibration.



## Cleaning and Care

---

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with water, silicone or oil-based lubricant.
- Use with water-based lube only, no silicone lubricants.



## Warning

---

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

**edenfantasys**  
THE NEW INTIMACY

[www.edenfantasys.com](http://www.edenfantasys.com)

Customer Service  
10 AM - 7 PM EST  
Phone: +1 (770) 604 - 1352