

Vibrating nipple sucker

PRODUCT MANUAL

Soft pleasure nubs

Removable bullet

Made from silicone and ABS plastic

Power

The bullet is disposable. Up to 30 minutes of intense vibrations.



How To Use

FR201602

 Slide the power switch to turn on/off.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air dry completely.
- Use with the water-based lube only, no silicone lubricants.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasys

www.edenfantasys.com

Customer Service 24/7 Phone: +1 (770) 604 - 1352