



Vibrating nipple suckers

PRODUCT MANUAL

Soft pleasure nubs

Removable bullet

Made from silicone
and ABS plastic


Power

- The bullet is disposable. Up to 30 minutes of intense vibrations.



How To Use

- Slide the power switch to turn on/off.

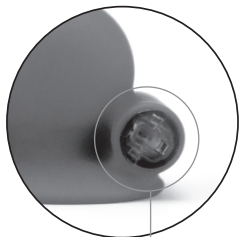

Power switch

Cleaning and Care

- Remove the bullet for thorough cleaning.
- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air dry completely.
- Use with the water-based lube only, no silicone lubricants.
- Please avoid contact with silicone or silicone-containing materials as it may damage the product.

Warning

- Do not use nipple suckers on inflamed and injured areas.
- Stop using the nipple suckers if pain occurs.

LIMIT THE USE OF THE NIPPLE SUCKERS TO NO LONGER THAN 15 MINUTES PER USE.

- Allow at least 60 mins between uses as more frequent use may increase the risk of injury to the nipples.
- Do not fall asleep while wearing the nipple suckers since prolonged use may cause injury to the nipples.
- Do not use the nipple suckers under the influence of alcohol or drugs, since it may impair the user's judgment and increase the risk of injuring the nipples.
- Misuse of nipple suckers may cause bruising, painful injury, or permanent damage to the nipples.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasy
THE NEW INTIMACY

www.edenfantasy.com

Customer Service
10 AM - 7 PM EST
Phone: 1 (770) 604 - 1352