



**Vibrating
pussy
in a plastic
case**

PRODUCT MANUAL

7 vibration modes

Realistic opening

**Made from skin-like
TPR material and ABS
plastic**

**Handy strap for
control pack**

Charging

- Insert 3 AAA batteries to power the control pack.
- Open the lid to insert the batteries.
- Follow the polarity instructions inside the battery case.



3 AAA batteries

Before Use

- Take the cap off and add lubricant inside to begin play.
- Insert the plug-ins into the base of the masturbator and the control pack.



How To Use

- Press the **ON/OFF** button to activate/deactivate the vibration.
- Press the **MODE** button quickly to cycle through 7 vibration modes.



Power button

Cleaning and Care

- Take the sleeve out of the plastic case for thorough cleaning.
- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Dust lightly with the corn starch for better use.
- Store away from heat and sunlight.
- Use with the water-based lube only, no silicone lubricants.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasy
THE NEW INTIMACY

www.edenfantasy.com

Customer Service 24/7
Phone: +1 (770) 604 - 1352