ed@nfantasys



Rotating tongue

3 rotation modes

Soft pleasure nubs

Made from TPR and ABS plastic

Charging

- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 3 hours for 1 hour of play.



PRODUCT MANUAL

How To Use

- Hold the vibrator's button to turn on/off.
- Press quickly to cycle through 3 rotation modes.



Power Button

Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air dry completely.
- Dust lightly with the corn starch for better use.
- Store away from heat and sunlight.
- Use with the water-based lube only, no silicone lubricants.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasys THE NEW INTIMACY

www.eden fant as ys.com

Customer Service 24/7 Phone: +1 (770) 604 - 1352