edénfantasys



Vibrating wand massager

PRODUCT MANUAL

Multispeed vibration

Extra powerful motor

Flexible neck

Made from PU-coated plastic

Power

- The item is powered by an electric cord.
- Insert the plug into the socket to activate the toy.
- Keep the toy plugged in to enjoy the play.



How To Use

- Rotate the power control to turn on/off.
- Adjust the power control to increase/reduce vibration intensity.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.
- The item can be sterilized with a 5% bleach solution or alcohol.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edénfantasys

www.edenfantasys.com

Customer Service 24/7 Phone: +1 (770) 604 - 1352