edénfantasys



Vibro glass plug

PRODUCT MANUAL

10 massage modes

Pleasure bulges for extra stimulation

Ergonomic base

Splashproof

Made from glass and ABS plastic

Charging

- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The intermittent glow indicates charging in progress.
- A full charge takes up to 1 hour for 1 hour of play.
- Do not use the device while charging.
- The remote is powered by 1 CR2032 battery (included). Slide the lid to open the battery compartment.



How To Use

- Hold the 🙂 button to turn the toy on/off.
- Press it quickly to cycle through 10 massage modes.

With the remote control

- Hold the 😃 button on the toy for standby mode. The LED lights will flash.
- Press the 😃 button on the remote to turn on/off.
- Press the *NV* button quickly to cycle through 10 massage modes.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Do not get water inside the remote as it is not waterproof.
- Use with water-based, silicone, or oil-based lubricants.



Warning

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with water-based, silicone, or oil-based lubricants.

edénfantasys

www.edenfantasys.com

Customer Service 10 AM - 7 PM EST Phone: +1 (770) 604 - 1352