# ed@nfantasys



Vibro share

PRODUCT MANUAL

7 vibration modes

Remote-controlled

Strong suction cup

Waterproof

Adjustable harness

Made from silicone, ABS plastic and neoprene

## Charging

- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 2 hours for 1 hour of play.



USB charging port

## **How To Use**

#### Without remote control

- Hold the **U** button to turn on/off.
- Press it quickly to cycle through 7 vibration modes

### With the remote control

- Hold the button on the base for standby mode. The LED lights will flash
- The remote is powered by 1 CR2032 battery (included). Slide the lid to open the battery compartment.
- Hold the button on the remote to turn on/off.
- Press the W button quickly to cycle through 7 vibration modes.



## **Cleaning and Care**

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to airdry completely.
- Do not get water inside the remote as it is not waterproof.
- Use with the water-based lube only, no silicone lubricants.



## **Warning**

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.



www.edenfantasys.com

Customer Service 24/7 Phone: +1 (770) 604 - 1352