edénfantasys



Vibro tities huggers

PRODUCT MANUAL

12 vibration modes

Remote-controlled

Pleasure ticklers

Waterproof

Made from silicone and ABS plastic

Charging

- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 2 hours for 1.5 hours of play.
- Do not use the device while charging.
- The remote control is powered by a 1 CR2032 battery (included).



Magnetic charging port

How To Use

Without remote control

- Hold the 😃 button to turn on/off.
- Press it quickly to cycle through 12 vibration modes.

With the remote control

- Hold the 😃 button on the toy for standby mode.
- Press the = button on the remote control to turn the toy on.
- Press the + or button quickly to cycle through 12 vibration modes.
- Press the = button again to pause the vibration.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edénfantasys

www.edenfantasys.com

Customer Service 24/7 Phone: +1 (770) 604 - 1352