## edénfantasys



# Viva XL

PRODUCT MANUAL

### 7 vibration modes

### **Powerful vibration**

2.2" width

11.8" length

Splashproof

Made from silicone and ABS plastic

#### Charging

- For maximum pleasure, charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow, intermittent glow indicates charging in progress.
- A full charge takes up to 2 hours for up to 2 hours of play.



#### How To Use

- Hold the 🖒 button to turn on/off.
- Press the *W* button quickly to cycle through 7 vibration modes.



**Power Button** 

#### **Cleaning and Care**

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.
- The item can be sterilized with a 5% bleach solution or alcohol.



#### Warning

- Do not use on inflamed and/or injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes and/or use that has an adverse effect on any function of the body is prohibited.

# edénfantasys

#### www.edenfantasys.com

Customer Service 24/7 Phone: +1 (770) 604 - 1352