ed@nfantasys



10 massage modes

2 powerful motors

Curved head for G-spot stimulation

Waterproof

Made from silicone and ABS plastic

Power

- The item is powered by 2 AAA batteries.
- Unscrew the base to insert the batteries.
- Follow the polarity instructions inside the battery case.
- When storing for an extended period, please remove batteries from the toy.



PRODUCT MANUAL

How To Use

- Hold the 🖒 button to turn on/off.
- Press the **M** button quickly to cycle through 10 massage modes.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.



Warning

- Do not use on inflamed and/or injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes and/or use that has an adverse effect on any function of the body is prohibited.

edenfantasys

www.edenfantasys.com

Customer Service 10 AM - 7 PM EST Phone: +1 (770) 604 - 1352