

*womanizer*<sup>TM</sup>

— THE ORIGINAL —

**PREMIUM**

MANUAL

 
# Hi!

**Thank you for choosing Womanizer™.**

Welcome to a world full of sensual experiences that will enrich you and your life time and again. By choosing the Womanizer, you are not only guaranteed orgasms that are beyond comparison but also an entirely new lust for pleasure. Celebrate your femininity and enjoy yourself. Don't miss out! Not on any orgasm, fantasy, or pleasure. Enjoy your product – and one orgasm after the next.



**Pleasure Air™ Technology**

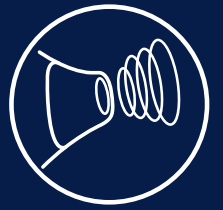

**12 intensity levels**



**Autopilot™**



**Smart Silence™**



**Waterproof**



**2 silicone stimulation attachments**



**LED display**



**Silent Technology**



**DESCRIPTION**

**CHARGING**

**QUICK GUIDE**

**USE**

**TIPS**

 
**CLEANING**

**GENERAL INFORMATION**

*Note: Please read these instructions carefully before your first pleasurable experience with your Womanizer™ and store them safely for later reference.*

# DESCRIPTION

- A** MAGNETIC CHARGING PINS
- B** LED DISPLAY (CHARGING LEVEL/MODE)
- B1** LED 1
- B2** LED 2
- B3** LED 3
- C** ON/OFF BUTTON
- D** AUTOPILOT™
- E+** INTENSITY BUTTON FOR CLITORAL STIMULATION (INCREASE)
- E-** INTENSITY BUTTON FOR CLITORAL STIMULATION (DECREASE)
- F** STIMULATION ATTACHMENT
- G** USB CHARGING CABLE WITH CHARGING HEAD

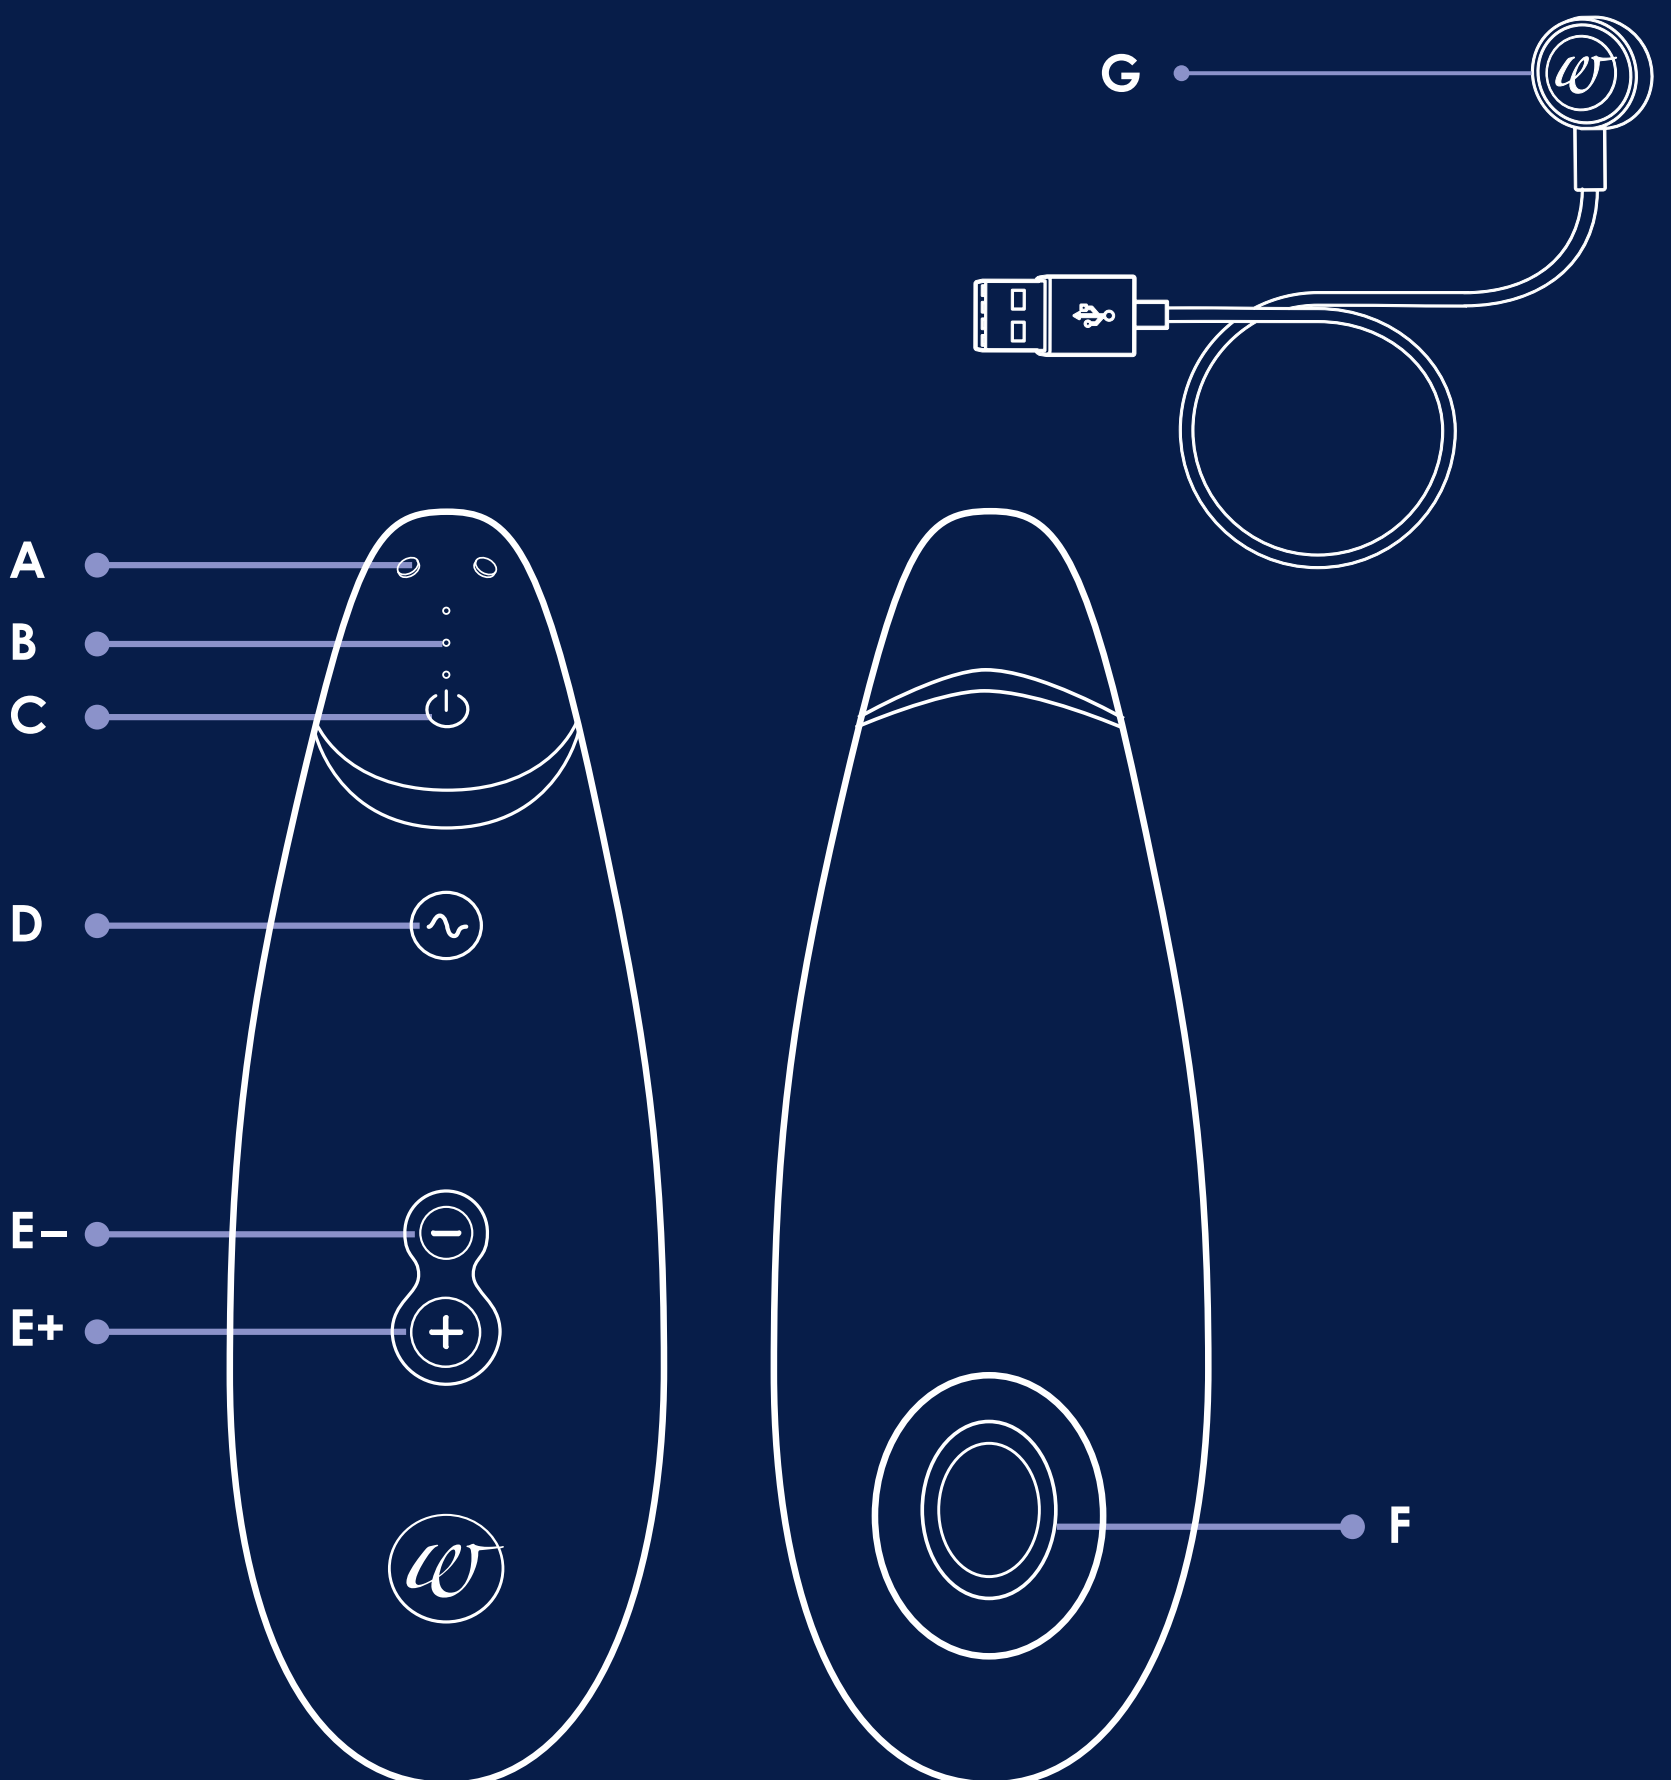

# CHARGING

## WARNING:

To make sure you get real pleasure from your Womanizer™ from the start, you should note a few things:


Before using the charging device for the first time, check the local voltage level, since the local mains voltage may not exceed the maximum mains voltage given on the device.

Never immerse the charging device or charging cable in water or other fluids.

Do not rinse the charging device and charging cable in running water.

Check the stimulation device regularly for any damage.

Do not use the device if one of the components is damaged.

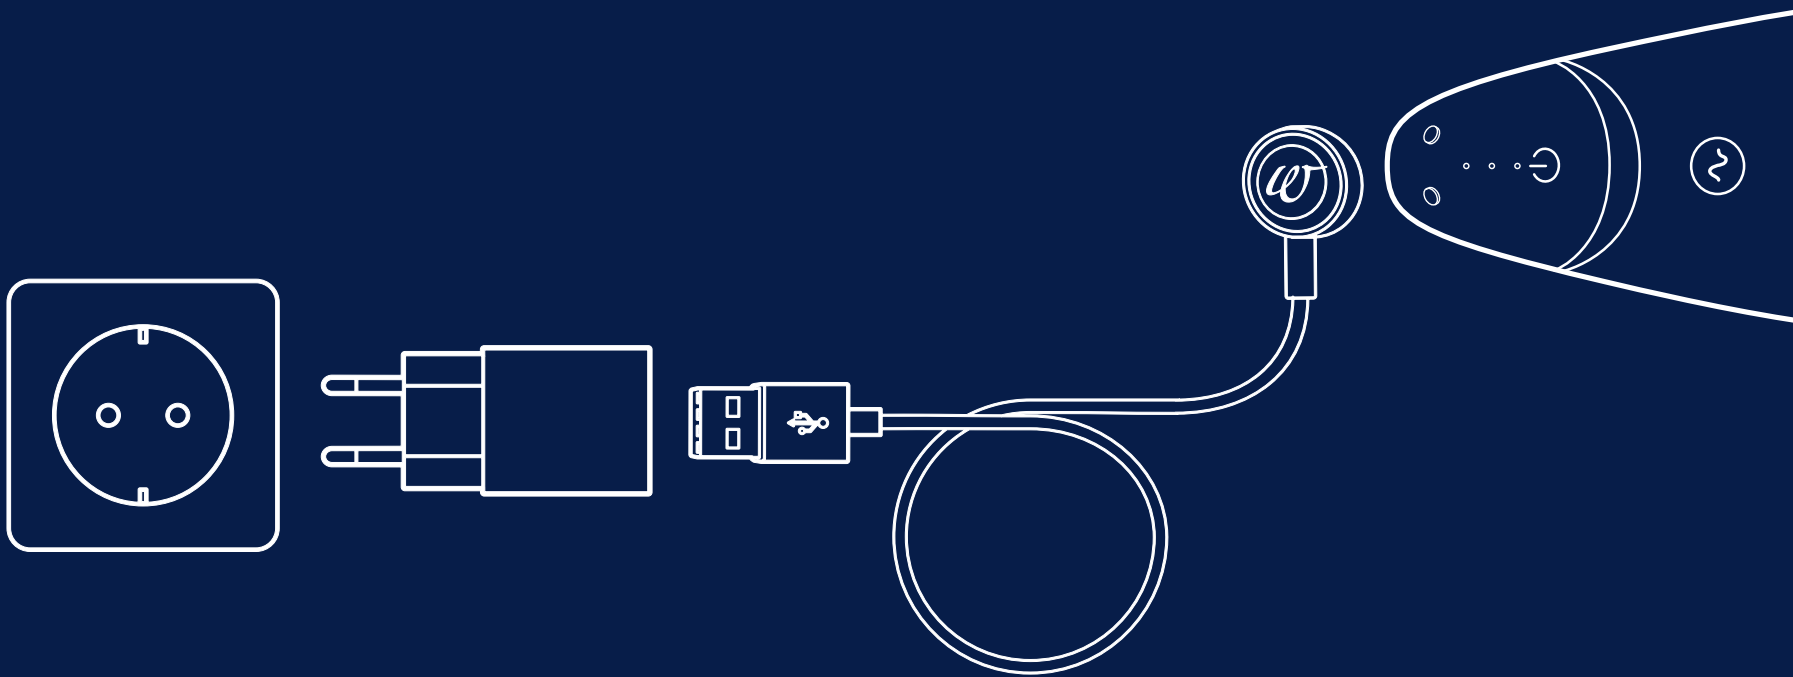

## PLEASE NOTE:

When you first hold the Womanizer™ in your hands, the rechargeable battery is only pre-charged for a short period of use. Since the rechargeable battery may have discharged fully due to environmental influences, we recommend that you fully charge the Womanizer before your first use. The charging process takes about two hours. If your Womanizer becomes warm during the charging process, this is entirely normal. After charging, you can experience up to 240 minutes of sensual pleasure with your Womanizer. The duration of the actual operating time depends on how intensively you enjoy your time with the Womanizer.

## CHARGING STATUS DISPLAY:

Your Womanizer has three LEDs (B). These serve two purposes: on the one hand, they show the mode in which the device is currently set (manual or Autopilot™, for more details, see chapter “Use”, section “Autopilot,” while on the other, they display the charging status while charging.

The charging status display appears as soon as you switch on the Womanizer with the On/Off button (C).

**THE FOLLOWING MAY APPEAR:**

1. All three LEDs light up (B1, B2 and, B3).  
The rechargeable battery is fully charged.
2. The lower two LEDs light up (B1 and B2).  
The rechargeable battery is half charged.
3. The bottom LED flashes (B1).  
The rechargeable battery is nearly empty.

You should charge the rechargeable battery on your Womanizer™ after the next application.

**PLEASE TAKE THE FOLLOWING STEPS IF YOU WISH TO CHARGE THE RECHARGEABLE BATTERY IN YOUR WOMANIZER™:**

1. Make sure that your Womanizer and the charging device are dry.
2. Connect the USB charging cable (G) to a suitable USB connection (such as an adapter or PC, or similar).
3. Place the charging head (G) on the magnetic pins (A).
4. Despite the magnetic attraction of the pins, make sure that the charging head (G) is optimally positioned on the device and your Womanizer is in a secure position for charging.
5. During the charging process, all three LEDs flash in succession.
6. Once your Womanizer is charged, all three LEDs light up at the same time and you can remove the charging cable (G).

# QUICK GUIDE

1.

## ON/OFF

Keep pressed down for two seconds.

Recommended position.



2.



3.



4.



# USE

## **NOTE:**

Before using your Womanizer™, please remove any piercings or jewelry in your intimate zone.

## **MANUALLY INCREASING AND DECREASING INTENSITY LEVELS:**

1. Keep the button (C) pressed down for two seconds to switch on your Womanizer. Please note that when switching on your Womanizer you do not touch the stimulation attachment, since otherwise, the Smart Silence™ function is not guaranteed.
2. Lightly splay apart your labia with your fingers to expose your clitoris.
3. Now you can place the stimulation attachment (F) tightly onto your clitoris, applying slight pressure, so that it is held in the oval opening of the stimulation attachment.
4. As soon as the stimulation attachment sits perfectly on your clitoris, you can start – and the moment is yours alone. Experience it however you want: If you want more intensity, briefly click the button (E+) and the intensity increases by one level. You can repeat this eleven times to reach the highest level of intensity. With each click, all three LEDs light up at the same time. Once you have reached the highest level, you will see no further change to the LEDs.
5. To reduce the intensity, click on the button (E–) briefly. The intensity is decreased by one level for each click. Here, too, all three LEDs light up at the same time with each click.
6. To hold your Womanizer in the desired position, you can close your thighs. Naturally, you can also simply hold the device in your hand.
7. Once your personal Womanizer moment has passed, simply switch off the device by pressing the button (C) for approx. two seconds.

## **IMPORTANT INFORMATION:**

Please do not use perfumed or alcohol-based lube gels or massage oils while using the Womanizer in order to avoid damage. Silicone-based lube gels are not recommended. If required, it's better to use a water-based lube gel with the Womanizer.

## **A SMALL TIP:**

If you notice that the stimulation attachment doesn't yet have the optimal fit, switch between the two stimulation attachments (S and M) included with the device to create the best feeling for you.

# TIPS

## DISCOVER NEW, EXCITING SIDES TO YOUR WOMANIZER™!

### SMART SILENCE™:

With Smart Silence, your Womanizer is only active when you use it on your clitoris. That makes it not only more discreet while in use, but also more pleasurable for you.

Your Womanizer only starts as soon as it touches the surface of your skin. This works entirely independently of the mode that the Womanizer is in (manual mode, going up or down levels, or on Autopilot™ – see the next paragraph). Smart Silence always starts from the level that was last selected or from the mode of the Autopilot function that was last set.

If you wish to deactivate the Smart Silence function, hold the two buttons (E+) and (E-) simultaneously for approx. two seconds. You will notice that the function has been switched off when your Womanizer is permanently active – in other words, not only when placed on your skin.

### AUTOPILOT™:

Do you want to let go completely and be spoiled by your Womanizer? With the Autopilot button, that's no longer a problem. Relax and use the button for the Autopilot function to select the intensity mode.

Press the Autopilot button (D) when you wish to activate the Autopilot function.

- After activation, you will automatically be taken to the first mode. The first mode is the Soft Mode between intensity levels 1 and 4. Here, the lowest LED (B1) lights up.
- When you press the plus button (E+), you are taken to Medium Mode, between intensity levels 1 and 8. Here, the middle LED (B2) lights up.
- When you press the plus button (E+) again, you are taken to Intensive Mode, between intensity levels 1 and 12. Here, the top LED (B3) lights up.

Your Womanizer runs on Autopilot in the intensity range selected by you. This means that in your moment of pleasure, you no longer need to operate the buttons of the Womanizer, but can experience your orgasm in an entirely unexpected and surprisingly new way. Time and again – just as you like it. In this way, the Autopilot also helps you build up your orgasm for longer, allowing you to experience it even more intensely.

If you do not wish to use the Autopilot function, you can deactivate it by briefly pressing the Autopilot button. This takes you automatically to manual Womanizer mode.

The Standby function allows you to use your Womanizer in a particularly battery-friendly, convenient way. When the device is not in use, it switches itself off after five minutes.

## LED-DISPLAY MODE

**MANUAL MODE:** All three LEDs are on.

---

**AUTOPILOT™:** Only one LED is on.

---

The lower LED is on  
(B1).

The middle LED is on  
(B2).

The upper LED is on  
(B3).

---

Soft Mode

Medium Mode

Intense Mode

---

## CHARGE STATUS

---

CASE 1

CASE 2

CASE 3

---

All three LEDs are on  
(B1, B2, and B3).

The lower two LEDs are  
on (B1 and B2).

The lower LED blinks  
(B1).

---






The battery is fully  
charged.

The battery is half  
charged.

The battery will soon  
run out of charge.

---

# CLEANING

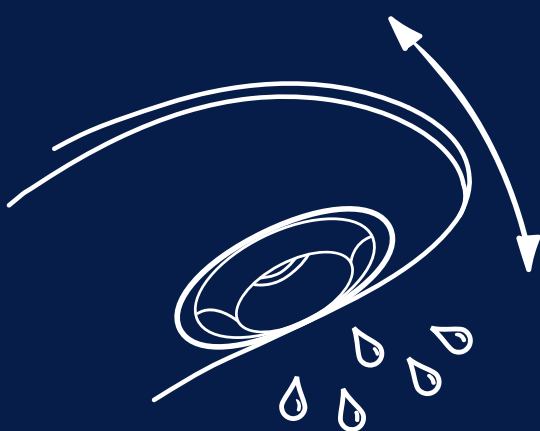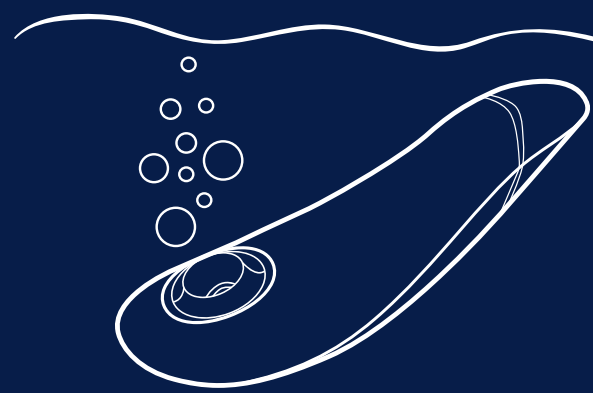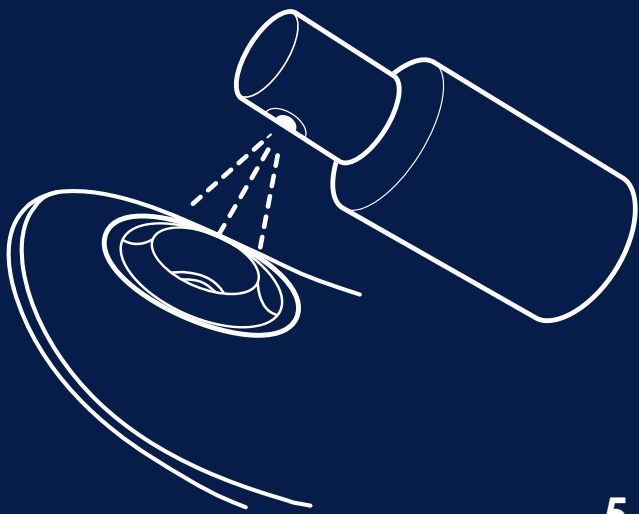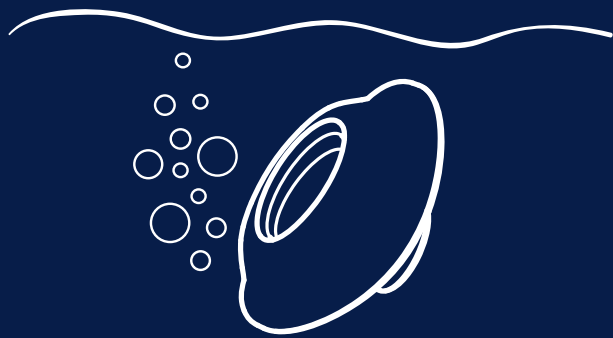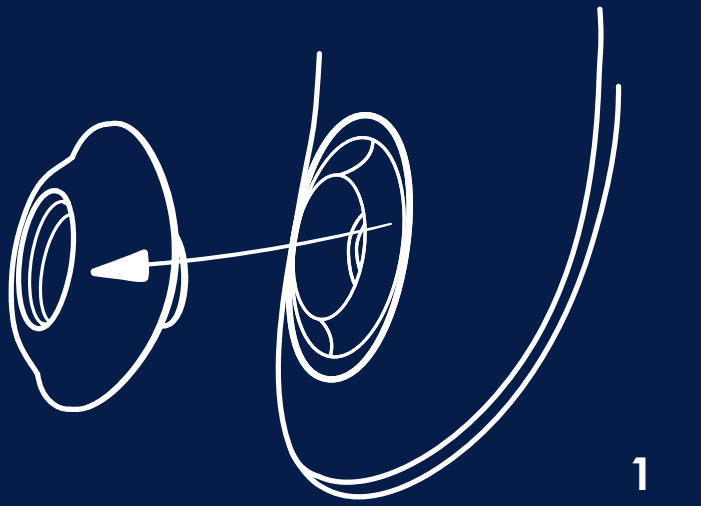

# CLEANING

## HERE'S HOW TO CLEAN YOUR WOMANIZER™:

Your Womanizer is 100% watertight and is easy to clean. For ideal cleaning, we recommend that you use a sex toy cleaner.

## PLEASE NOTE:

When changing the stimulation attachments or cleaning the Womanizer head, we recommend that you switch off the Womanizer.

## CLEANING YOUR WOMANIZER™ IN TEN EASY STEPS:

1. Make sure that the charging cable has been disconnected.
2. Remove the stimulation attachment from the device.
3. Clean the stimulation attachment in hot water and treat it with a sex toy cleaner.
4. Then put the sex toy cleaner into the pressure chamber and let it briefly take effect.
5. Switch the Womanizer to the highest level and immerse it into warm water for one minute.
6. You can then shake out your Womanizer.
7. Keep your Womanizer switched on until the noises caused by contact with the water can no longer be heard.
8. Now switch off the Womanizer and dry it off with a cloth.
9. You can also clean the compression chamber with a cotton wool bud and sex toy cleaner.
10. Finally, reapply the stimulation attachment and you're done.

# GENERAL INFORMATION

## USE

Thoroughly clean your Womanizer™ before using it for the first time, after each usage, and when using in another body area in order to reduce the risk of infection (see section “How to clean your Womanizer”).

## STORAGE

Place the cleaned Womanizer back in the storage box. Store in a secure, dry place without exposure to direct sunlight.

## TECHNICAL DATA

Model: Premium / WZ09  
Charging device: Input: 100–240 V ~ 50/60 Hz  
Output: 5 V --- 1 A

## DISTRIBUTOR

WOW TECH™ EUROPE GMBH, Friedenstrasse 91A, 10249 Berlin – Germany

WOW TECH™ EUROPE GMBH reserves the right to technical changes and changes to the design that serve to improve the device.

Produced in 2019. Made in China.



## WARNING

**For perfect use of the product, please note the following:**

- Keep the product away from children, especially small children.
- Always clean the product according to the instructions given here.
- Do not expose the product or the charging device to direct sunlight or UV light for a long period of time.
- Avoid high temperatures.
- Never immerse the cable in water or other fluids, and never rinse it under running water.
- Do not charge the product when one of the components is damaged.

**If you wish to use the product under any of the circumstances below, please consult your doctor:**

- During pregnancy or shortly after giving birth
- Skin irritations / skin diseases
- Other health problems
- If you have physical allergic reactions to the material

**Please also note the following in order to use the product safely:**

- Never use the product for longer than 15 minutes on any one area.
- Do not use the product if you have a pacemaker.
- Only use the product for the intended purpose, for clitoral stimulation.
- Stop use immediately if you experience pain or discomfort.

## RECHARGEABLE BATTERY

The device has an integrated lithium-ion rechargeable battery. The rechargeable battery may not be burnt, dismantled, or exposed to temperatures above 60°C. If overheated, the rechargeable battery, and therefore also the device, may be damaged. This device is only suitable for users with restricted physical, sensory, or psychological abilities, or without any experience or previous knowledge, when appropriate supervision or detailed instruction on the use of the device is provided by a responsible person. Ensure that children do not play with the device. If you notice an unusual noise, switch off the stimulation device immediately and refrain from further use.

## ENVIRONMENTAL PROTECTION

### (note on batteries and waste electronic devices)

As a distributor of electronic devices, we are legally obliged to accept the return of waste electrical and electronic devices free of charge. We expressly state that you as the user are legally obliged to return used batteries.

Never throw away electronic devices or batteries in household waste. The symbol shown below, which is also attached to our electronic items, is intended to expressly remind you of this.



For further information, in particular with regard to returning batteries and electronic devices, see the “Terms and Conditions” section of our website.

## WARRANTY

### FULFILLMENT OF STANDARDS

This device fulfills all standards relating to electromagnetic compatibility (EMC). The device is safe to use as long as it is used correctly and in accordance with the instructions given in this user manual.

### WARRANTY AND VOLUNTARY MANUFACTURER’S WARRANTY

WOW TECH™ EUROPE GMBH offers customers a voluntary manufacturer’s warranty for Womanizer™ products in addition to the statutory warranty to which consumers are entitled with respect to sellers.

The conditions with respect to the voluntary manufacturer’s warranty are on our website, under “Warranty Conditions.”

