



X-spot charmer

PRODUCT MANUAL

2 powerful motors

**10 massage and
rimming modes**

**Nubbed tail for extra
stimulation**


Remote control

Waterproof

**Made from silicone
and ABS plastic**

Charging


- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The intermittent glow indicates charging in progress.
- A full charge takes up to 1.5 hours for 1 hour of play.
- Do not use the device while charging.

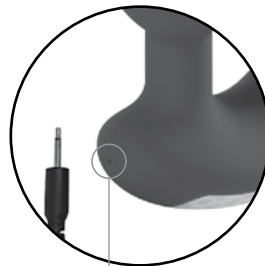




USB
charging port


How To Use

Without remote control

- Hold the  button to turn the toy on/off.
- Press it quickly to cycle through 10 massage and rimming modes.

With the remote control

- Hold the  button on the toy for standby mode.
- Hold the  button on the remote to turn it on/off.
- Press the  button to cycle through 10 massage and rimming modes.
- The toy and the remote will automatically turn off after 20 minutes if not in use.

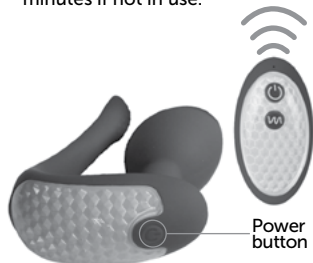

Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with water-based lube only, no silicone lubricants.
- Please avoid contact with silicone or silicone-containing materials as it may damage the product.
- Do not get water inside the remote control as it is not waterproof.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasy
THE NEW INTIMACY

www.edenfantasy.com

Customer Service
10 AM - 7 PM EST
Phone: +1 (770) 604 - 1352