



X-spot rotator

PRODUCT MANUAL

Rotating P-spot shaft

10 rotation modes

10 vibration modes

2 powerful motors

Pleasure ridges

Waterproof

Made from silicone
and ABS plastic


Charging

- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 3 hours for 1 hour of play.






USB
charging port

How To Use

- Hold the  button to turn on/off.
- Press it quickly to cycle through 10 vibration and rotation modes.

With the remote control

- Hold the  button to turn on/off.
- Press the  button to cycle through 10 vibration modes.
- Press the  button to cycle through 10 rotation modes.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.
- The item can be sterilized with a 5% bleach solution or alcohol.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasys
THE NEW INTIMACY

www.edenfantasys.com

Customer Service 24/7
Phone: + 1 (770) 604 - 1352