



Zen

PRODUCT MANUAL

10 massage modes

5 intensities

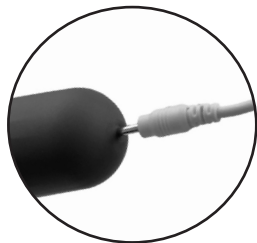
Memory function

Flexible neck

**Made from silicone
and ABS plastic**




Charging

- For maximum pleasure charge the toy before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 2 hours minutes for 1.5 hour minutes of play.
- Do not use the device while charging.



USB charging port

How To Use

- Hold the  button to turn on/off.
- Press it quickly to cycle through 10 massage modes.
- Press the  button to increase massage intensity.
- Press the  button to reduce massage intensity.



Power button

Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the toy before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.
- Please avoid contact with silicone or silicone-containing materials as it may damage the product.

Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.



edenfantasy
THE NEW INTIMACY

www.edenfantasy.com

Customer Service
10 AM - 7 PM EST.
Phone: +1 (770) 604 - 1352